


Installation Guide


REDtip Roof Hook M101

Compatible with slates


See REDtip selector chart

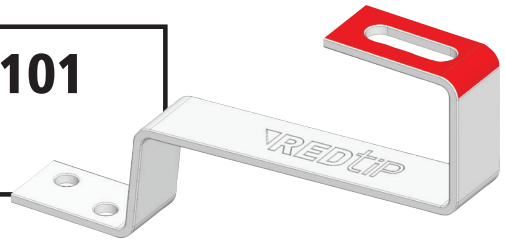


- 1** Remove slates and identify a suitable rafter to attach the REDtip roof hook to. Tack a flashing (or other suitable material) to the batten below the hook. Ensure that the screws are fully tightened to secure the hook.

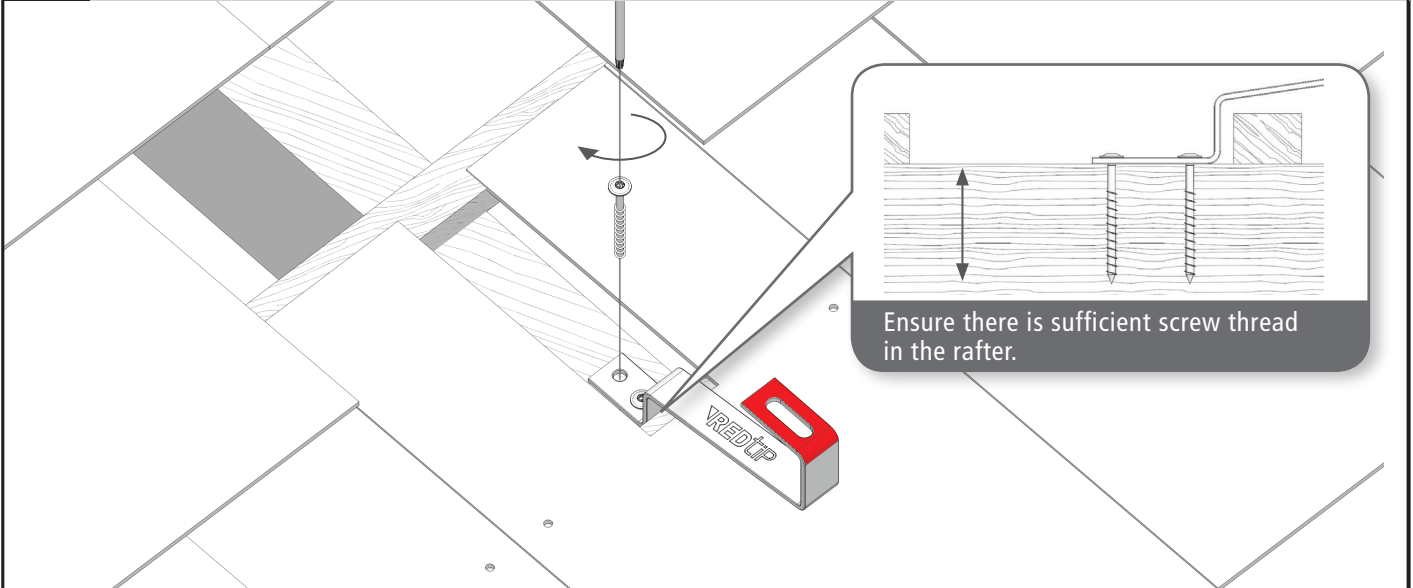


- 2** Cut the slates to fit around the hook.

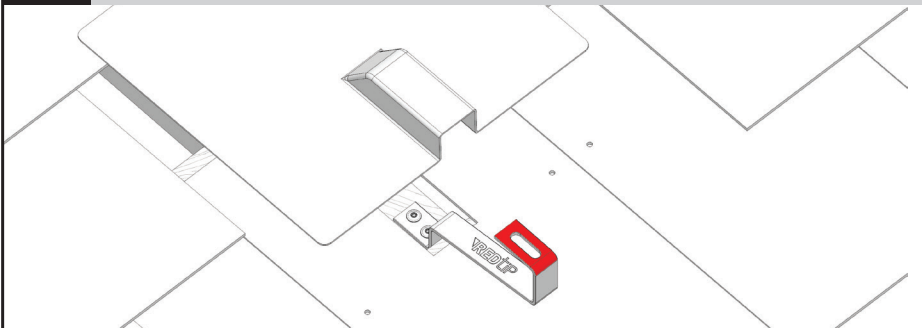

- 3** Position the flashing above the hook and under the adjacent slates, to make weathertight.

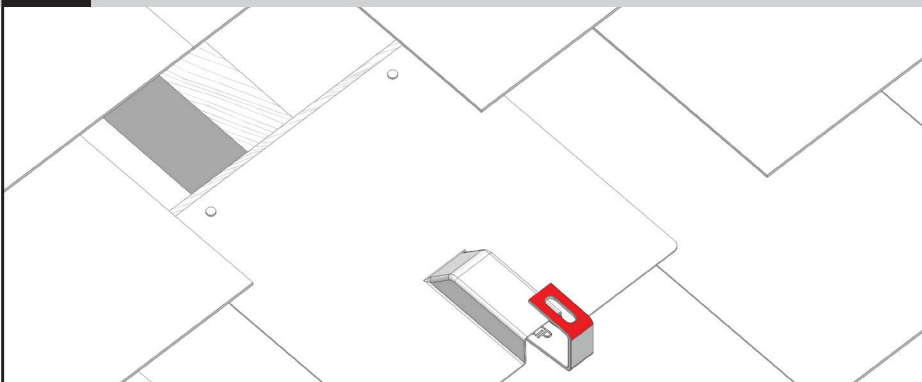

- 4** Replace the slates above.

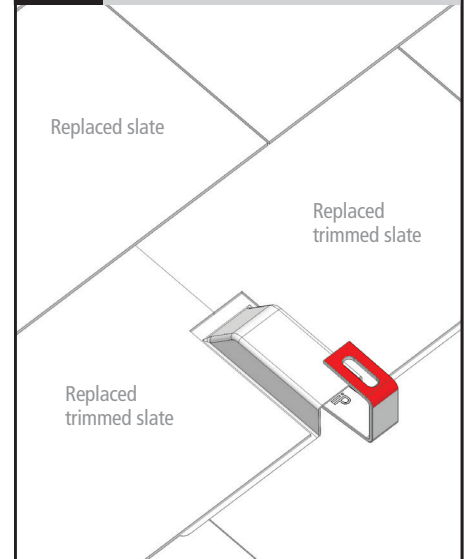

The flashing displayed are of a Solar Flash'.
For further instruction on using Solar Flash please visit;
<http://www.geniusroofsolutions.com>
Other flashing types are available.

REDtipTM
solar mounting systems



Visit our website and see how it's done in real time action, by scanning the QR code. You can download QR readers from App Store.
www.redtip.co